

单触点机顶闪光灯/Legacy Hot Shoe Camera Flashes: V850III、TT600、TT600S、TT520II、TT560II、V850II、V850II Kit、TT520III

单触点复古闪光灯/Legacy Hot Shoe Retro Camera Flashes: Lux Junior、Lux Senior、Lux Cadet、Lux Elf

单触点微距灯/Legacy Hot Shoe Macro Flashes: ML-150II、MF-R76、ML-150

单触点遥控器/Legacy Hot Shoe Remote Control: XTR16、XTR16S、RT-16

注：1. 此表格仅列举目前已测试的相机型号，未涵盖所有相机。其他相机型号，用户可自行测试。

2. 本公司保留未来修改此表格内容的权利。

Note: 1. This table only lists the tested camera models, not all cameras. For the compatibility of other camera models, a self-test is recommended.

2. Rights to modify this table are retained.

相机品牌 Brand	相机型号 Model	是否支持闪光同步 Flash Sync
佳能相机 Canon	5DIII	√
	5DIV	√
	70D	√
	80D	√
	1DX	√
	850D	√
	760D	√
	5DI	√
	7DII	√
	6DII	√
	6D	√
	800D	√
	90D	√
	600D	√
	7D	√
	3000D	不支持 Unavailable
	1500D	
	200DII	
	M5	
	M3	√
EOS RP	√	
EOS R	√	
R5	√	
R6II	√	
R7	√	
R50	√	
60D	√	

备注:

1.R50相机要加转接座使用。

2.佳能1500D、3000D、200DII不支持单点触发。

3.Lux Elf复古闪光灯不支持R7/R6II/R8/R10相机。

Note:

1. Camera R50 needs to collocate with an adapter.

2.Canon 1500D, 3000D and 200DII do not support legacy hot shoe triggering.

3. Lux Elf is not compatible with R7/R6II/R8/R10 cameras.

相机品牌 Brand	相机型号 Model	是否支持闪光同步 Flash Sync
奥林巴斯相机 Olympus	E-M1	√
	PRN-F	√
	E-M10II	√
	E-M10III	√
	E-PL8	√
	E-P5	√
E-M5II	√	

相机品牌 Brand	相机型号 Model	是否支持闪光同步 Flash Sync
尼康相机 Nikon	D800	√
	D780	√
	D5	√
	D4	√
	D500	√
	D610	√
	D750	√
	D700	√
	D300S	√
	D3300	√
	D3100	√
	D5300	√
	D5200	√
	D5000	√
	Z7II	√
	Z6	√
	Z8	√
	ZFC	√
	D200	√
	D60	√
D5100	√	
D7500	√	
D7100	√	

相机品牌 Brand	相机型号 Model	是否支持闪光同步 Flash Sync
松下相机 Panasonic	GH4	√
	LX100	√
	GF1	√
	G85	√
	GX85	√
	FZ2500GX	√
	S1R	√
	GH5	√
G7	√	

相机品牌 Brand	相机型号 Model	是否支持闪光同步 Flash Sync
索尼相机 Sony	A7III	√
	A7IV	√
	A7R5	√
	A7RIII	√
	A7RIV	√
	A9	√
	A7RII/IV4.0	√
	A7R	√
	A6400	√
	RX10	√
	A99	√
	A77	√
	A77II	√
	A350	√
ZV-1	√	
ZV-E10	√	
A9III	不支持/Unavailable	

备注:

1. A99/A77/A350单反相机有些要加转接座使用。

2. A9III相机不支持单点触发。

Note:

1. DSLR cameras A99/A77/A350 need to collocate with adapters.

2. A9III does not support legacy hot shoe triggering.

3. A9III does not support legacy hot shoe triggering.

4. A9III does not support legacy hot shoe triggering.

5. A9III does not support legacy hot shoe triggering.

6. A9III does not support legacy hot shoe triggering.

7. A9III does not support legacy hot shoe triggering.

8. A9III does not support legacy hot shoe triggering.

9. A9III does not support legacy hot shoe triggering.

10. A9III does not support legacy hot shoe triggering.

11. A9III does not support legacy hot shoe triggering.

12. A9III does not support legacy hot shoe triggering.

13. A9III does not support legacy hot shoe triggering.

14. A9III does not support legacy hot shoe triggering.

15. A9III does not support legacy hot shoe triggering.

16. A9III does not support legacy hot shoe triggering.

17. A9III does not support legacy hot shoe triggering.

18. A9III does not support legacy hot shoe triggering.

19. A9III does not support legacy hot shoe triggering.

20. A9III does not support legacy hot shoe triggering.

21. A9III does not support legacy hot shoe triggering.

22. A9III does not support legacy hot shoe triggering.

23. A9III does not support legacy hot shoe triggering.

24. A9III does not support legacy hot shoe triggering.

25. A9III does not support legacy hot shoe triggering.

26. A9III does not support legacy hot shoe triggering.

27. A9III does not support legacy hot shoe triggering.

28. A9III does not support legacy hot shoe triggering.

29. A9III does not support legacy hot shoe triggering.

30. A9III does not support legacy hot shoe triggering.

相机品牌 Brand	相机型号 Model	是否支持闪光同步 Flash Sync
富士相机 FUJIFILM	X-PrG2	√
	X-T20	√
	X-T2	√
	X-T1	√
	GF550s	√
	GF550R	√
	X-T30	√
	X-T4	√
	X-T3	√
	X-Pro1	√
	X-T10	√
	X-E1	√
	X-A3	不支持/Unavailable
	X100F	√
X100T	√	
X-T5	√	
X-T50	√	
X-H2	√	

备注:

1. X100F相机快门在1/250和1/4000引闪不同步。

2. X100T相机快门大于1/60就会不同步。

3. X-A3相机不支持单点触发。

Note:

1. Camera X100F do not support sync triggering at a shutter speed of 1/250 and 1/4000.

2. Camera X100T do not sync at a shutter speed over 1/60.

3. Camera X-A3 does not support legacy hot shoe triggering.

4. Camera X-A3 does not support legacy hot shoe triggering.

5. Camera X-A3 does not support legacy hot shoe triggering.

6. Camera X-A3 does not support legacy hot shoe triggering.

7. Camera X-A3 does not support legacy hot shoe triggering.

8. Camera X-A3 does not support legacy hot shoe triggering.

9. Camera X-A3 does not support legacy hot shoe triggering.

10. Camera X-A3 does not support legacy hot shoe triggering.

11. Camera X-A3 does not support legacy hot shoe triggering.

12. Camera X-A3 does not support legacy hot shoe triggering.

13. Camera X-A3 does not support legacy hot shoe triggering.

14. Camera X-A3 does not support legacy hot shoe triggering.

15. Camera X-A3 does not support legacy hot shoe triggering.

16. Camera X-A3 does not support legacy hot shoe triggering.

17. Camera X-A3 does not support legacy hot shoe triggering.

18. Camera X-A3 does not support legacy hot shoe triggering.

19. Camera X-A3 does not support legacy hot shoe triggering.

20. Camera X-A3 does not support legacy hot shoe triggering.

21. Camera X-A3 does not support legacy hot shoe triggering.

22. Camera X-A3 does not support legacy hot shoe triggering.

23. Camera X-A3 does not support legacy hot shoe triggering.

24. Camera X-A3 does not support legacy hot shoe triggering.

25. Camera X-A3 does not support legacy hot shoe triggering.

26. Camera X-A3 does not support legacy hot shoe triggering.

27. Camera X-A3 does not support legacy hot shoe triggering.

28. Camera X-A3 does not support legacy hot shoe triggering.

29. Camera X-A3 does not support legacy hot shoe triggering.

30. Camera X-A3 does not support legacy hot shoe triggering.

相机品牌 Brand	相机型号 Model	是否支持闪光同步 Flash Sync
奥林巴斯相机 Olympus	E-M1	√
	PRN-F	√
	E-M10II	√
	E-M10III	√
	E-PL8	√
	E-P5	√
E-M5II	√	

相机品牌 Brand	相机型号 Model	是否支持闪光同步 Flash Sync
松下相机 Panasonic	GH4	√
	LX100	√
	GF1	√
	G85	√
	GX85	√
	FZ2500GX	√
	S1R	√
	GH5	√
G7	√	

相机品牌 Brand	相机型号 Model	是否支持闪光同步 Flash Sync
宾得相机 Pentax	K-3II	√
	645Z	√
	KP	√
	K-70	√
	K-S2	√
	K-1	√
	K50	√

相机品牌 Brand	相机型号 Model	是否支持闪光同步 Flash Sync
徕卡相机 Leica	SL1	√
	M10	√
	Q2	√
	Typ601	√
	LEICA-CL	√
	LEICA-SL2	√