



XR 接收器固件说明

- 一、请使用神牛固件升级软件 G3 V1.1 及以上版本打开该固件进行升级，G3 可在官网下载。
- 二、固件升级方法：在关机状态下，按住<->按钮插入 USB 线连接电脑，XR 进入固件升级界面。操作电脑端 G3 固件升级工具升级固件。
- 三、版本号查看方法：接收器开机，长按<  >按钮进入“菜单”设置，在“关于本机”中查看“设备型号”和“固件版本”。
- 四、版本说明：

版本	更新内容	日期
V1.04	1. 修复 XR 连接相机时，持续触发相机快门的问题。 2. 修复 XR 设置为 C 然后被 Nikon 发射器在 HSS 下引闪后，切换回 N 以后，Nikon 发射器引闪不正常的问题。	2026-04-13
V1.03	1. 修复在连接相机进行控制时，快门持续时间与发射器端不一致的问题。 2. 修复一些小问题。	2026-03-24
V1.00	初始版本	2025-11-18

注：详细规格请在官网（www.godox.com.cn）下载最新说明书。

XR Receiver Firmware Release Note

- 1. Please use the Godox firmware upgrade software G3 V1.1 or above to open the firmware for upgrading. G3 can be downloaded from the official website.
- 2. Firmware upgrade method: Power Off the XR receiver, press and hold the<->button, insert the USB cable to connect to the computer, and the XR will enter the firmware upgrade interface. Use G3 firmware upgrade tool on the computer to upgrade the firmware.
- 3. Version number viewing method: Turn on the receiver, long press the  button to enter the "Menu" settings, and check the "Model" and "Version" in "Info".
- 4. Release List:

Version	Updated Content	Date
V1.04	<div>1. Fixed continuous shutter firing when XR connects to the camera.</div> <div>2. Fixed abnormal triggering with Nikon transmitters that occurred when switching the XR back to 'N' mode after being triggered in HSS under 'C' mode.</div>	2026-04-13
V1.03	<div>1. Fixed the issue where the shutter duration was inconsistent with the transmitter end when connecting to the camera for control.</div> <div>2. Fix some minor issues.</div>	2026-03-24
V1.00	First Production version.	2025-11-18

Note: For more details, please download the newest instruction manual on the official website: www.godox.com.