

LE300Bi 固件说明

- 1. 请使用 U 盘拷贝固件到根目录，U 盘需要 FAT32 格式，且根目录下同时只能存在一个固件（bin 文件）。
- 2. 将 U 盘接入灯具 u 盘接口后，按住 MODE 键，打开灯具电源，触发升级后等待升级完成。
- 3. 版本号查看方法：进入菜单里灯具信息查看。
- 4. 版本说明：

版本	更新内容	日期
V1.04	增加屏幕翻转功能	20260514
V1.03	修复已知问题	20251226

注：详细规格请在官网（www.godox.com.cn）下载最新说明书。

Godox LE300Bi Firmware Release Notes

- 1. Please copy the firmware file to the root directory of a USB flash drive. The USB drive must be formatted in FAT32, and only one firmware file (.bin) can exist in the root directory at the same time.
- 2. Insert the USB drive into the USB port of the light fixture. Then press and hold the MODE button while powering on the fixture. Once the upgrade is triggered, please wait until the process is completed.
- 3. Firmware Version Check:
Go to the menu and enter Fixture Information to view the current firmware version.
- 4. Version Details:

Version	Update Details	Date
V1.04	Added screen flip function	2026/05/14
V1.03	Fixed known issues	2025/12/26

Note: For detailed specifications, please download the latest user manual from www.godox.com.