


# LITEMONS

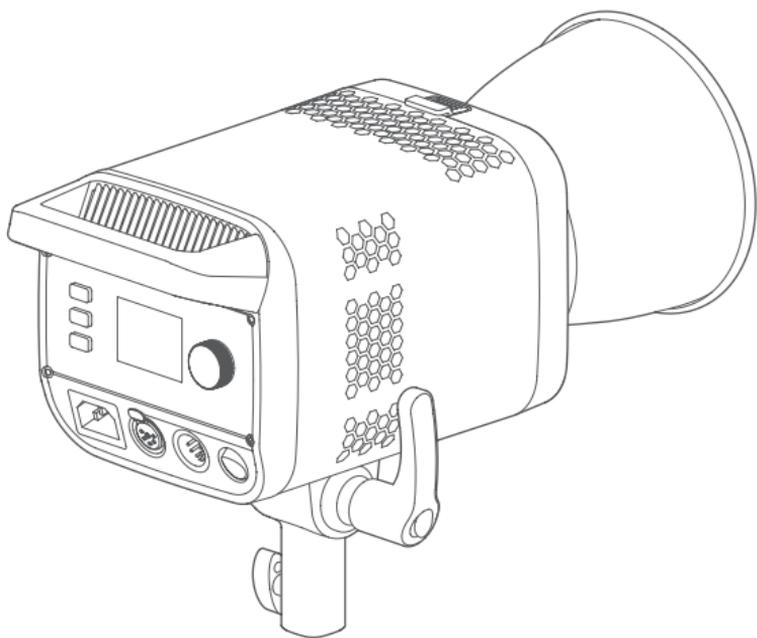

## LE200D Instruction Manual 使用手册

## 重要安全说明

使用前请务必仔细阅读本手册，并严格遵守以下安全注意事项。



### 危险

- 本设备为摄影灯具，禁止儿童单独使用。儿童靠近时，监护人需全程密切看护，防止因碰撞或擅自操作引发人身伤害。
- 若外壳出现开裂、变形、进液、异味或异常发热等情况，请立即停止使用。
- 仅限使用原厂配件，或经制造商明确推荐的配件；否则可能导致火灾、电击或人身伤害。
- 本设备必须接入具备可靠接地功能的电源插座；在断开或重新连接电源线前，先切断设备电源；严禁在通电状态下进行电源线的插拔操作。



### 警告

- 本设备不具备防水防尘功能，禁止在雨天、高湿度、多尘环境中使用。
- 若设备进水或受潮，请立即切断电源，并断开所有连接线缆。
- 严禁在酒精、汽油等易燃易爆气体或液体附近使用本设备。
- 严禁遮挡或堵塞设备散热孔，以防过热引发危险。
- 严禁私自拆卸或改装设备。非授权拆解可能导致电路故障或永久性损坏。如需维修，请联系神牛授权服务中心。



请勿直视光源

本设备包含型号核准代码为：CMIIT ID: 24J44V807298，为该产品的无线电发射模块。

## 物品清单



灯体 × 1



反光罩 (BR30A) × 1



AC 电源线 × 1




使用手册 × 1


### 注:

1. 开箱后核对所购套装内的物品，若有缺失或破损，及时联系经销商。
2. 图示仅供参考，具体以实际产品为准。

## 部件名称

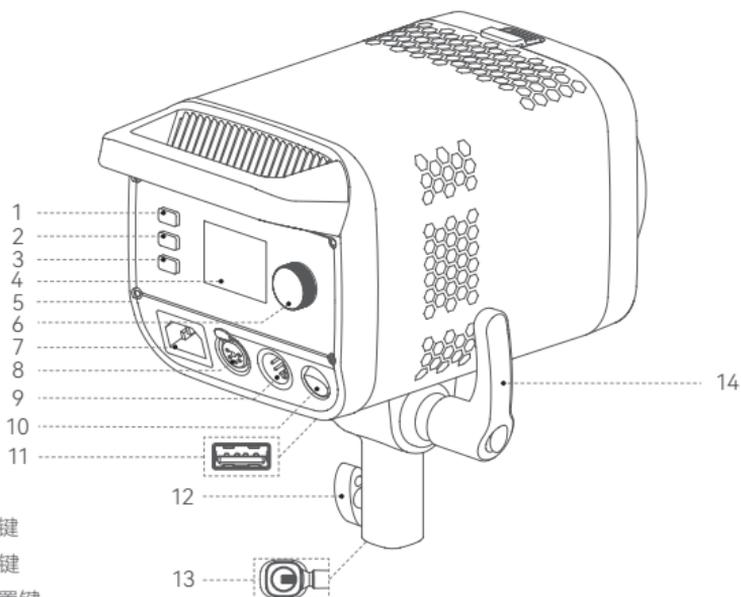

1. MODE 键
2. MENU 键
3. 蓝牙重置键
4. 显示屏
5. NFC 感应区
6. 调节旋钮
7. AC INPUT 接口
8. DMX OUT 接口
9. DMX IN 接口
10. 电源键
11. USB-A 接口
12. 灯架锁紧旋钮
13. 套筒 (内径 16mm)
14. 俯仰锁紧把手
15. 散热孔
16. 卡口释放键
17. 保荣卡口
18. COB 灯珠
19. 伞孔

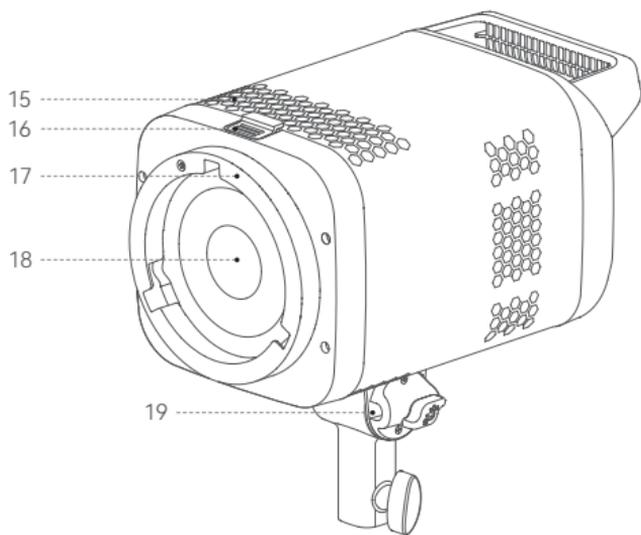


## 附件使用步骤

反光罩：安装时对准卡口推入，顺时针旋转锁定。拆卸时按住卡口释放键，同时逆时针旋转取下。

灯架（另购）：套筒插入灯架，拧紧灯架锁紧旋钮。

## 有线 DMX 连接

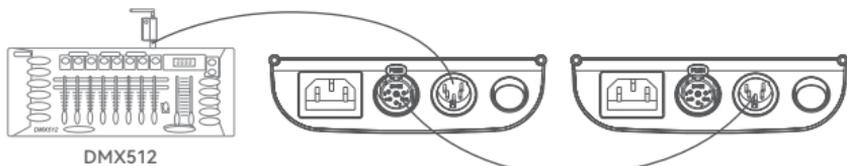

注：仅展示连接 DMX512 控制台方式，控制台及连接线需另购。

连接多台

## 控制面板操作说明

### 电源键

AC INPUT 接口接入电源后，拨至 ( I ) 开机，拨至 ( O ) 关机。

### MODE 键

短按：切换亮度或 FX 光效界面。

### MENU 键

短按：进入菜单界面。

### 蓝牙重置键

长按：蓝牙重置。

### 调节旋钮

旋转：切换选项或增减参数值。

短按：确认执行当前选中项。

## FX 光效设置

| 光效  | 亮度       | 开关      | 速度    | 其他  |
|-----|----------|---------|-------|---|
| 闪光灯 | 0% -100% | 开启 / 关闭 | 1-100 | 模式: 闪光灯 / 镁光灯<br>触发: 自动 / 手动                  |
| 雷闪电 |          |         | /     | 触发: 自动 / 手动<br>闪烁次数: 随机 /1-10<br>频率: 随机 /2-20 |
| 坏灯泡 |          |         | 1-100 | /   |
| 电视机 |          |         | 1-100 | /   |
| 爆炸  |          |         | 1-100 | 触发: 自动 / 手动<br>余烬: 1-100                      |
| 焊接  |          |         | 1-100 | /   |
| SOS |          |         | /     | /   |

注: 触发方式设为手动时, 短按调节旋钮可触发一次光效。

## 菜单设置

| 图标   | 功能     | 选项       |                     | 说明  |
|--|--------|----------|---------------------|---|
|  | DMX    | 地址       | 1-512               | 起始地址  |
|  |        | DMX 模式   | 01: CCT 8 Bit       | 8 位 CCT 模式  |
|  |        |          | 02: FX 8 Bit        | 8 位 FX 模式   |
|  |        |          | 03: CCT 16 Bit      | 16 位 CCT 模式   |
|  |        |          | 04: FX 16 Bit       | 16 位 FX 模式  |
|  |        |          | 05: ULTIMATE 8 Bit  | 8 位 ULTIMATE 模式   |
|  |        |          | 06: ULTIMATE 16 Bit | 16 位 ULTIMATE 模式  |
|  |        | RDM 状态   | 开启                  | 开启后控制台可设置灯具地址及 DMX 模式                                     |
|  |        |          | 关闭                  | 关闭 RDM  |
|  |        | DMX 丢失状态 | 保持最后状态              | 失去 DMX 控制信号后, 在关机或再次接收有效 DMX 控制信号前, 持续使用最后一次接收的 DMX 控制信号。 |
| 直接关闭   | 灯具直接熄灭 |          |                     |   |

| 图标  | 功能       | 选项       |                  | 说明   |
|---|----------|----------|------------------|--|
|    | DMX      | DMX 丢失状态 | 保持最后状态<br>2 分钟熄灭 | 失去 DMX 控制信号后，持续使用最后一次接收的 DMX 控制信号 2 分钟，2 分钟后灯具熄灭。注：如 2 分钟内接收到有效 DMX 控制信号，则使用新的 DMX 控制信号。 |
|   |          | 终止开关     | 开启               | 开启 DMX 终端  |
|   |          |          | 关闭               | 关闭 DMX 终端  |
|   |          | 增强通道     | 开启               | 开启增强通道信号   |
| 关闭  | 关闭增强通道信号 |          |                  |  |
|    | 蓝牙       | 开启       |                  | 开启蓝牙功能   |
|   |          | 关闭       |                  | 关闭蓝牙功能   |
|   |          | 重置       |                  | 重置蓝牙   |
|   |          | MAC 码    |                  | 便于查找设备   |
|    | 风扇       | 静音       |                  | 设置风扇状态   |
|   |          | 自动       |                  |  |
|   |          | 中速       |                  |  |
|   |          | 高速       |                  |  |
|    | 屏幕设置     | 10%-100% |                  | 设置界面亮度   |
|    | 语言       | 简体中文     |                  | 设置界面语言   |
|   |          | English  |                  |  |
|    | 版本与升级    | /        |                  | 通过“Godox Light”升级  |
|    | 恢复出厂设置   | 确定       |                  | 所有参数恢复至出厂默认值，设备自动重启，亮度重置为 100%。  |
|   |          | 取消       |                  | /  |
|  | 灯具信息     | /        |                  | 查看型号 / 固件版本等信息   |

## “Godox Light” 应用程序连接指南

扫描二维码，或在应用商店搜索“Godox Light”下载安装。



1. 蓝牙重置：长按蓝牙重置键。
2. 蓝牙配对：打开应用程序，选择“蓝牙添加”，搜索并连接设备。
3. NFC 速连：开启移动设备 NFC 功能，应用程序内选择“NFC 添加”，贴近灯体 NFC 感应区即可自动配对。
4. 固件升级：在应用程序设备列表中点击 [ ⋮ ] 选择固件升级，将自动检测新版本，请按提示操作。

## 照度数据

| 色温    | 测试条件          | 照度单位 | 1 m   | 2 m   | 3 m  |
|-------|---------------|------|-------|-------|------|
| 5600K | 裸灯            | lux  | 6810  | 1750  | 824  |
|       |               | fc   | 632   | 162   | 77   |
|       | 搭配反光罩 (BR30A) | lux  | 63500 | 13500 | 5690 |
|       |               | fc   | 5900  | 1260  | 529  |

注 文中数据均为 100% 亮度下的平均测试值。

## 技术参数

|             |   |
|-------------|---|
| 产品名称        | 光小兽单色温 LED 直播灯  |
| 产品型号        | LE200D  |
| AC INPUT 接口 | 100 V - 240 V ~ 50/60 Hz, 220 W   |
| USB-A 接口    | 输出: 5 V  0.5 A |
| 色温          | 5600 K  |
| 亮度范围        | 0% ~ 100%   |
| FX 光效       | 7 类   |
| CRI         | ≈ 96  |
| TLCI        | ≈ 97  |
| 控制方式        | 有线 DMX/RDM、应用程序、灯体控制  |
| 蓝牙控制距离      | 最远 30 米   |
| 工作环境温度      | -20°C ~ 45°C  |
| 尺寸 (不含反光罩)  | 158 × 239 × 262 mm  |
| 净重 (不含反光罩)  | ≈ 2.5 kg  |

注: 产品设计与规格如有变更, 恕不另行通知。

## 维护保养

1. 清洁前务必关机并断开电源。仅可使用干燥软布擦拭, 严禁使用酒精、苯或其他挥发性溶剂。
2. 存放前请确保产品完全冷却, 断开所有线缆, 置于通风干燥、无强磁场干扰的环境。

## Important Safety Instructions

Read this manual thoroughly before use and strictly observe the following safety precautions.



### **DANGER**

- This device is professional lighting equipment, not intended for use by children. Children should use this device under adult supervision.
- Stop using immediately if the housing is cracked or deformed, if liquid enters the device, or if it emits a strange odor or becomes abnormally hot.
- Use only original accessories or accessories specified by the manufacturer. Failure to do so may result in fire, electric shock, or personal injury.
- This device must be connected to a grounded power outlet. Turn off the device before disconnecting or reconnecting the power cord. Strictly do not plug or unplug the power cord while the device is powered on.



### **WARNING**

- This device is NOT waterproof or dustproof. Do not use in rain, high humidity, or dusty environments.
- If liquid enters the device or it becomes damp, disconnect the power immediately and remove all cables.
- Strictly do not use near flammable or explosive gases or liquids (e.g., alcohol, gasoline).
- Strictly do not block or obstruct the air vents to prevent overheating.
- Do not disassemble or modify the device without authorization. Unauthorized disassembly may result in circuit malfunction or permanent damage. Contact an authorized Godox service center for repairs.



**Do not stare at the operating light source.**

## What's Inside



Light Fixture × 1



Reflector (BR30A) × 1



AC Power Cord × 1




Instruction Manual × 1

### Note:

1. Check the package contents after unboxing. If any items are missing or damaged, contact the dealer immediately.
2. Illustrations are for reference only and may differ from the actual product.


## Names of Part

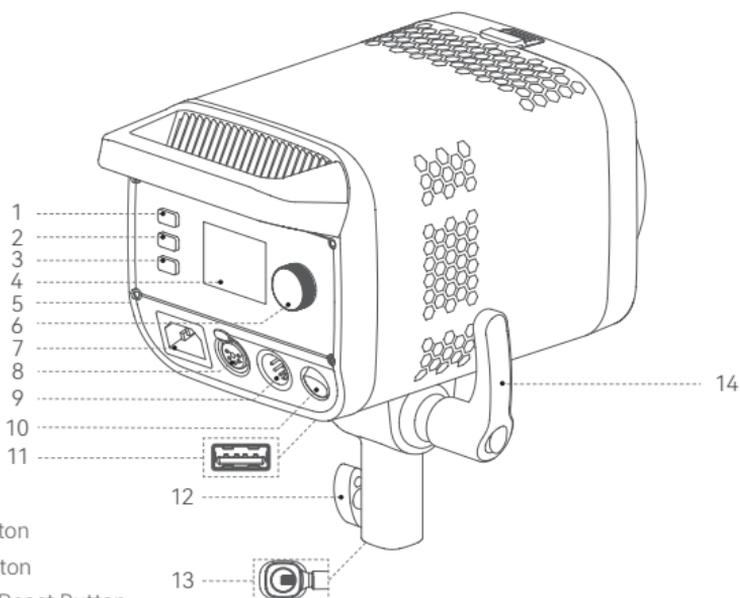

- 1. MODE Button
- 2. MENU Button
- 3. Bluetooth Reset Button

- 4. Display Panel
- 5. NFC Zone
- 6. Select Dial
- 7. AC Input Port
- 8. DMX Output Port
- 9. DMX Input Port
- 10. Power Switch
- 11. USB-A Port
- 12. Locking Knob
- 13. Sleeve ( $\Phi 16\text{mm}$ )

- 14. Tilt Locking Handle
- 15. Air Vents
- 16. Mount Release Button
- 17. Bowens Mount
- 18. LED COB
- 19. Umbrella Hole

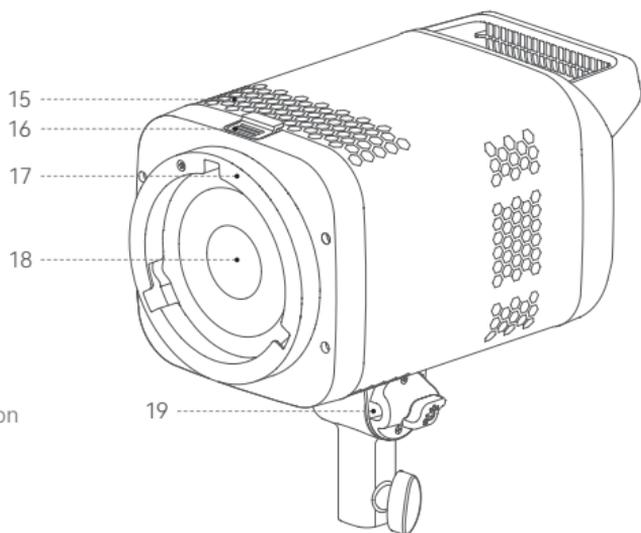


## Accessory Installation

**Reflector:** Align the mount and push in. Rotate clockwise to lock into place. To remove, press and hold the Mount Release Button and turn the reflector counter-clockwise.

**Light Stand (Sold Separately):** Insert the light stand into the sleeve and tighten the locking knob.

## Wired DMX Connection

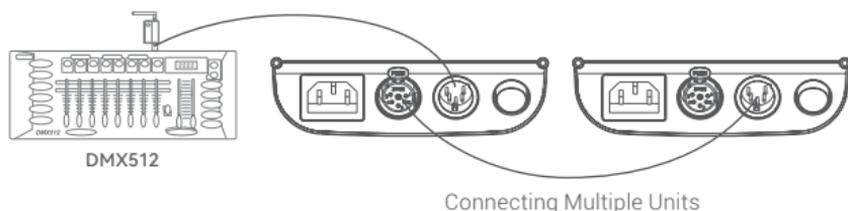

**Note:** The diagram illustrates the connection to a DMX512 console. The console and connection cables are sold separately.

## Control Panel Operation Guide

### Power Button

After connecting the power cable to the AC INPUT port, flip to (  ) to power on, flip to (  ) to power off.

### MODE Button

Press: Switch between Brightness and FX Effects interfaces.

### MENU Button

Press: Enter the Menu interface.

### Bluetooth Reset Button

Press and hold: Reset Bluetooth.

### Select Dial

Turn: Switch options or increase/decrease values.

Press: Confirm the selection.

## FX Settings

| Effect      | Brightness | Switch | Speed | Other  |
|-------------|------------|--------|-------|--|
| Flash       | 0% -100%   | On/Off | 1-100 | Mode:Camera Flash / Flash bulb<br>Trigger: Auto / Manual                     |
| Lighting    |            |        | /     | Trigger: Auto / Manual<br>Times: Random / 1 - 10<br>Frequency: Random / 2-20 |
| Broken Bulb |            |        | 1-100 | /  |
| TV          |            |        | 1-100 | /  |
| Explosion   |            |        | 1-100 | Trigger: Auto / Manual<br>Embers: 1 - 100                                    |
| Welding     |            |        | 1-100 | /  |
| SOS         |            |        | /     | /  |

**Note:** In "Manual" trigger mode, press the Select Dial to trigger the effect once.

## Menu Settings

| Icon  | Function                           | Option    | Description            |   |
|---|------------------------------------|-----------|------------------------|---|
|  | DMX                                | Address   | 1-512<br>Start Address |   |
|   |                                    | DMX Mode  | 01: CCT 8 Bit          | 8-bit CCT Mode  |
|   |                                    |           | 02: FX 8 Bit           | 8-Bit FX Mode   |
|   |                                    |           | 03: CCT 16 Bit         | 16-bit CCT Mode   |
|   |                                    |           | 04: FX 16 Bit          | 16-bit FX Mode  |
|   |                                    |           | 05:ULTIMATE 8 Bit      | 8-bit ULTIMATE Mode   |
|   |                                    |           | 06: ULTIMATE 16 Bit    | 16-bit ULTIMATE Mode  |
|   |                                    | RDM State | On                     | Enable RDM. The console can remotely set the fixture address and DMX mode.  |
|   |                                    |           | Off                    | Disable RDM   |
|   |                                    | DMX Lost  | Hold Last Command      | Upon loss of DMX signal, the fixture continues to use the last received signal until powered off or a new signal is received. |
| Black out   | The fixture turns off immediately. |           |                        |   |

| Icon  | Function          | Option              | Description   |                                 |
|---|-------------------|---------------------|---|---------------------------------|
|    | DMX               | DMX Lost            | Black out after 2 min<br>Upon loss of DMX signal, the fixture holds the last signal for 2 minutes, then turns off. Note: If a valid DMX signal is received within 2 minutes, the fixture will use the new signal. |                                 |
|   |                   | Termination         | On  | Enable internal DMX terminator  |
|   |                   |                     | Off   | Disable internal DMX terminator |
|   |                   | Extend DMX Channels | On  | Enable enhanced channel signal  |
|   |                   |                     | Off   | Disable enhanced channel signal |
|    | Bluetooth         | On                  | Turn on Bluetooth   |                                 |
|   |                   | Off                 | Turn off Bluetooth  |                                 |
|   |                   | Reset               | Reset Bluetooth connection  |                                 |
|   |                   | MAC Code            | For device identification   |                                 |
|    | Fan               | Mute                | Set the fan status  |                                 |
|   |                   | Auto                |   |                                 |
|   |                   | Medium              |   |                                 |
|   |                   | High                |   |                                 |
|    | Display           | 10%-100%            | Adjust Display Brightness   |                                 |
|    | Language          | 简体中文                | Set interface language  |                                 |
|   |                   | English             |   |                                 |
|    | Version & Upgrade | /                   | Upgrade via "Godox Light" App   |                                 |
|   | Factory Reset     | Yes                 | Upon confirmation, all parameters are restored to factory defaults. The device reboots automatically, and brightness resets to 100%.  |                                 |
|   |                   | No                  | /   |                                 |
|  | Fixture Info      | /                   | View Model / Firmware version   |                                 |

## "Godox Light" App Connection Guide

Scan the QR code or search for "Godox Light" in the App Store to download.



1. Bluetooth Reset: Press and hold the Bluetooth Reset Button.
2. Bluetooth Pairing: Open the App, select "Add Bluetooth", then search for and connect the device.
3. NFC Connection: Enable NFC on the mobile device. Tap "Add NFC" in the App, then place the device near the NFC Zone on the light to pair automatically.
4. Firmware Upgrade: In the App device list, tap the menu ( ⋮ ) and select "Firmware Upgrade". The App will automatically check for new versions. Follow the on-screen instructions.

## Illuminance Data

| CCT   | Testing                | Unit | 1 m   | 2 m   | 3 m  |
|-------|------------------------|------|-------|-------|------|
| 5600K | Bare Light             | lux  | 6810  | 1750  | 824  |
|       |                        | fc   | 632   | 162   | 77   |
|       | With Reflector (BR30A) | lux  | 63500 | 13500 | 5690 |
|       |                        | fc   | 5900  | 1260  | 529  |

**Note:** All data are average values measured at 100% brightness.

## Technical Data

|                                  |  |
|----------------------------------|--|
| <b>Product Name</b>              | <b>LITEMONS D-color LED Light</b>      |
| Product Mode                     | LE200D                                 |
| AC Input                         | 100 V-240 V ~ 50 / 60 Hz, 220 W        |
| USB-A Port                       | 5 V $\equiv$ 0.5 A                     |
| CCT                              | 5600 K                                 |
| Brightness Range                 | 0% ~ 100%                              |
| FX Modes                         | 7 Types                                |
| CRI                              | $\approx$ 96                           |
| TLCI                             | $\approx$ 97                           |
| Control Methods                  | Wired DMX / RDM, App, On-board Control |
| Bluetooth Distance               | Max. 30 m                              |
| Working Environment              | -20°C~ 45°C                            |
| Dimensions (excluding reflector) | 158 × 239 × 262 mm                     |
| Net Weight (excluding reflector) | $\approx$ 2.5 kg                       |

**Note:** Product design and specifications are subject to change without notice.

## Maintenance

1. Disconnect the power before cleaning. Clean the surface with a dry, soft cloth only. Strictly do not use alcohol, benzene, or other volatile solvents.
2. Ensure the device has cooled down completely and all cables are disconnected. Store in a dry, well-ventilated environment away from strong magnetic fields.

## **FCC Caution**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

## **Warning**

Operating frequency:2402MHz – 2480MHz (BT)

Maximum EIRP Power: 5dBm

## **Declaration of Conformity**

GODOX Photo Equipment Co.,Ltd. hereby declares that this equipment are in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. In accordance with Article 10(2) and Article 10(10), this product is allowed to be used in all EU member states.For more information of DoC, Please click this web link:

<https://www.godox.com/eu-declaration-of-conformity/>

The device complies with RF specifications when the device used at 0mm from your body.

## IC Warning

This device complies with Innovation, Science and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil est conforme aux normes RSS sans licence d'innovation, sciences et développement économique Canada. Les opérations sont soumises aux deux conditions suivantes:

- (1) Cet appareil ne peut pas causer d'interférences, et
- (2) Cet appareil doit accepter toute interférence, y compris celles qui pourraient entraîner un fonctionnement accidentel de l'appareil.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Tout changement ou modification non expressément approuvé par la partie responsable de la réglementation de l'OCDE peut faire perdre à l'utilisateur le droit d'utiliser l'appareil.

## 产品保修

尊敬的用户, 本保修卡是申请保修服务的重要凭证, 请您配合销售商填写并妥善保管, 谢谢!

|       |      |       |
|-------|------|-------|
| 产品信息  | 型号   | 产品条形码 |
| 用户信息  | 姓名   | 联系电话  |
|       | 通信地址 |       |
| 销售商信息 | 名称   |       |
|       | 联系电话 |       |
|       | 通信地址 |       |
|       | 销售日期 |       |
| 备注    |      |       |

注: 此表应由销售商盖章确认。

### 适用产品

本文件适用于相关《产品保修信息》(见后面说明)所列产品,其他非属此范围的产品或部件(如促销品、赠品及其他出厂后附加的部件等)不在此保修承诺内。

### 保修期

产品及部件的相应保修期按相关的《产品保修信息》执行。保修期自产品首次购买日起算, 购买日以购买产品时保修卡登记日期为准。

### 如何获得保修服务

您可直接与产品销售商或授权服务机构联系, 也可拨打神牛产品售后服务电话, 与我们联系, 由我们的服务人员为您安排服务。申请保修时, 您应提供有效的保修卡作为保修凭证, 方可获得保修。如您不能提供有效的保修卡, 则在我们确认产品或部件属于保修范围的情况下, 也可以为您提供保修, 但这不作为我们的义务。

## 不适用保修情况

如产品存在下列情况，本文件项下的保证和服务将不适用：①产品或部件超过相应保修期；②错误或不当使用、维护或保管导致的故障或损坏，如：不当搬运；非按产品合理预期用途使用；不当插拔外接设备；跌落或外力挤压；接触或暴露于不适当温度、溶剂、酸碱、水浸或潮湿环境；③由非神牛授权机构或人员安装、修理、更改、添加或拆卸造成的故障或损坏；④产品或部件原有识别信息被修改变更或删除；⑤无有效保修卡；⑥使用非合法授权、非标准或非公开发行的软件造成的故障或损坏；⑦因不可抗力或意外事件造成的故障或损坏；⑧其他非因产品本身质量问题导致的故障或损坏。遇上述情况，您应向相关责任方寻求解决，神牛对此不承担任何责任。因非在保修期或保修范围内的部件、附件或软件导致产品不能正常使用的，不是保修范围内的故障。产品使用过程中正常的脱色，磨损和消耗，不是保修范围内的故障。

## 产品保修和服务支持信息

产品的保修期和服务类型按以下《产品保修信息》执行：

| 部件                   | 保修期（月） | 保修服务类型 |
|----------------------|--------|--------|
| 内部电路板                | 12     | 客户送修   |
| 其他（例如光效附件、各类线材或其他包装） | 无      | 无保修    |

神牛产品售后服务电话 0755-29609320-8062

## Warranty

Dear customers, as this warranty card is an important certificate to apply for our maintenance service, please fill in the following form in coordination with the seller and safe-keep it. Thank you!

|                             |                       |                            |
|-----------------------------|-----------------------|----------------------------|
| <b>Product Information</b>  | <b>Model</b>          | <b>Product Code Number</b> |
| <b>Customer Information</b> | <b>Name</b>           | <b>Contact Number</b>      |
|                             | <b>Address</b>        |                            |
| <b>Seller Information</b>   | <b>Name</b>           |                            |
|                             | <b>Contact Number</b> |                            |
|                             | <b>Address</b>        |                            |
|                             | <b>Date of Sale</b>   |                            |
| <b>Note</b>                 |                       |                            |

Note: This form shall be sealed by the seller.

### Applicable Products

Applicable ProductsThe document applies to the products listed on the Product Maintenance Information (see below for further information). Other products or accessories (e.g. promotional items,giveaways and additional accessories attached,etc.) are not included in this warranty scope.

### Warranty Period

The warranty period of products and accessories isimplemented according to the relevant Product Maintenance Information. The warranty period is calculated from the day(purchase date) when the product is bought for the first time,And the purchase date is considered as the date registered onthe warranty card when buying the product.

### How to Get the Maintenance Service

If maintenance service is needed, you can directly contact the product distributor or authorized service institutions. You can also contact the Godox after-sale service call and we will offer you service. When applying for maintenance service, you should provide valid warranty card. If you cannot provide valid warranty card, we may offer you maintenance service once confirmed that the product or accessory is involved in the maintenance scope, but that shall not be considered as our obligation.

## Inapplicable Cases

The guarantee and service offered by this document are not applicable in the following cases:

① The product or accessory has expired its warranty period; ② Breakage or damage caused by inappropriate usage, maintenance or preservation, such as improper packing, improper usage, improper plugging in/out external equipment, falling off or squeezing by external force, contacting or exposing to the improper temperature, solvent, acid, base, flooding and damp environments, etc; ③ Breakage or damage caused by non-authorized institution or staff in the process of installation, maintenance, alternation, addition and detachment; ④ The original identifying information of product or accessory is modified, alternated, or removed; ⑤ No valid warranty card; ⑥ Breakage or damage caused by using illegally authorized, nonstandard or non-public released software; ⑦ Breakage or damage caused by force majeure or accident; ⑧ Breakage or damage that could not be attributed to the product itself. Once met these situations above, you should seek solutions from the related responsible parties and Godox assumes no responsibility. The damage caused by parts, accessories and software that beyond the warranty period or scope is not included in our maintenance scope. The normal discoloration, abrasion and consumption are not the breakage within the maintenance scope.

## Maintenance and Service Support Information

The warranty period and service types of products are implemented according to the following Product Maintenance Information:

| Parts   | Maintenance Period (month) | Warranty Service Type                         |
|---|----------------------------|---|
| Internal circuit board                                  | 12                         | Customer sends the product to designated site |
| Other Items (optical accessories, cables, package, etc) | No                         | Without warranty                              |

Godox After-sale Service Call 0755-29609320-8062



Wechat  
Official Account  
神牛微信公众号

### 深圳市神牛摄影器材有限公司

地址: 深圳市宝安区福海街道塘尾社区耀川工业园厂房 2 栋  
电话: 0755-29609320 (8062) 传真: 0755-25723423 邮箱: godox@godox.com

### GODOX Photo Equipment Co., Ltd.

Add.: Building 2, Yaochuan Industrial Zone, Tangwei Community, Fuhai Street, Bao'an District, Shenzhen  
518103, China Tel: +86-755-29609320(8062) Fax: +86-755-25723423 E-mail: godox@godox.com

[www.godox.com](http://www.godox.com)

Made in China | 705-LE20D0-00

