



LED摄影灯  
LED Video Light

LED64



使用手册  
Instruction Manual

## 一、前言

感谢您购买神牛产品！

LED64摄影灯非常适用于微距拍摄、产品拍摄、以及视频拍摄等。它亮度高、色温准确、轻巧便携。摄影灯通过亮度旋钮可以控制发光的亮度，可实现4灯组合，实际拍摄中可以根据需要灵活控制光线亮度。

## 警告

- 请保持干燥：请勿用湿手接触产品，亦不可将产品浸入水中或暴露于雨中。
- 请勿私自拆卸产品，如产品出现故障须由本公司或授权的维修人员进行检查维修。
- 请勿让儿童接触本产品。
- 本产品不能防水，在雨天及潮湿环境下请注意防水。
- 请勿放置在超过50度的高温环境中。
- 请勿在化学品、可燃性气体或其他特殊物质附近使用闪光灯，这些物质在特殊情况下可能对闪光灯发出的瞬间强光敏感，有可能导致火灾或电磁干扰。在这些场合下，请注意相关警告标识。
- 使用电池的注意事项：
  - 切勿将电池投入火中或加热升温。
  - 当电量用尽时，电池容易漏液。所以为了避免产品受损，请在长期使用本产品或电量用尽时取出电池。
  - 如果受损电池中的液体接触到皮肤或衣服，请立即用大量清水冲洗。

## 三、部件

- 01. 64粒灯珠
- 02. 电源开关
- 03. 亮度旋钮
- 04. 电池仓锁件
- 05. 热靴接口
- 06. 固定旋钮
- 07. 热靴连接座
- 08. DC电源插座
- 09. 1/4支架安装孔



 
## 四、安装使用

- 1. 安装摄影灯
  - 转动摄影灯的固定旋钮(06)至最高点，将摄影灯热靴(07)水平插入相机或摄像机热靴。
  - 扭紧固定旋钮(06)。

注：如您的摄像机没有热靴座，可以购买市面上的摄像机连接支架，通过摄影灯上的1/4支架安装孔来固定。




## 2. 使用摄影灯

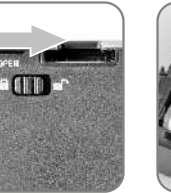

• 向右滑动电池仓锁件(04)解锁，打开电池仓。



 • 按电池仓里的正负极标识安装电池(4\*AA)，并关闭好电池仓。

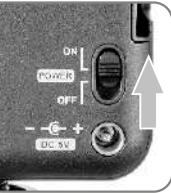

• 打开电源开关(02)，摄影灯开始发光。



• 通过调节亮度旋钮(03)，可控制发光的亮度。

如果使用DC电源供电，请用5V充电器(需自行购买)先连接好电源，再打开本产品电源开关(02)进入工作状态。当使用完之后请关闭电源开关(02)。

## 3. 摄影灯组合使用

通过热靴接口(05)与热靴连接座(07)之间的连接，可以组合多个摄影灯在一起，加强发光亮度，更好的控制摄影的光线效果。



## 五、产品参数

电池供电	4*AA电池
DC电源供电	5V
最大功率	<4.5W
色温	5500~6500K
亮度	>1000Lux (0.5 米)
调光方式	无级调光
灯珠数量	64个
工作环境温度	-10~40度
产品尺寸	85mm*85mm*35mm
净重	130g

\* 设计和规格如有变更，恕不另行通知。

合格证  
QC PASS

## 产品保修

尊敬的用户，本保修卡是申请保修服务的重要凭证，请您配合销售商填写并妥善保管，谢谢！

产品信息	型号	产品条码
用户信息	姓名	联系电话
	通信地址	
销售商信息	名称	
	联系电话	
	通信地址	
	销售日期	
备注		

注：此表应由销售商盖章确认。

## 适用产品

本文件适用于相关《产品保修信息》(见后面说明)所列产品，其他非属此范围的产品或部件(如促销品、赠品及其他出厂后附加的部件等)不在此保修承诺内。

## 保修期

产品及部件的相应保修期按相关的《产品保修信息》执行。保修期自产品首次购买日起算，购买日以购买产品时保修卡登记日期为准。

## 如何获得保修服务

要保修服务，您可直接与产品销售商或授权服务机构联系，也可拨打神牛产品售后服务电话，与我们联系。由我们的服务人员为您安排服务。申请保修时，您应提供有效的保修卡作为保修凭证，方可获得保修。如您不能提供有效的保修卡，则在我们可确认产品或部件属于保修范围的情况下，也可以为您提供保修，但这不作为我们的义务。

## 不适用保修的情况

如产品存在下列情况，本文件项下的保证和服务将不适用：  
①产品或部件超过相应保修期；  
②错误或不适当使用、维护或保管导致的故障或损坏，如：不当搬运；非按产品合理预期用途使用；不当插拔外接设备；跌落或外力挤压；接触或暴露于不当温度、溶剂、酸碱、水浸或潮湿环境；  
③由非神牛授权机构或人员安装、修理、更改、添加或拆卸造成的故障或损坏；  
④产品或部件原有识别信息被修改或去除；  
⑤无有效保修卡；  
⑥使用非合法授权、非标准或非公开发行的软件造成的故障或损坏；  
⑦因不可抗力或意外事件造成的故障或损坏；  
⑧其他非因产品本身质量问题导致的故障或损坏。遇上述情况，您应向相关责任方寻求解决，神牛对此不承担任何责任。因非在保修期或保修范围内的部件、附件或软件导致产品不能正常使用的，不是保修范围内的故障。产品使用过程中正常的脱色、磨损和消耗，不是保修范围内的故障。

## 产品保修和服务支持信息

产品的保修期和服务类型按以下《产品保修信息》执行：

产品类别	选件名称	保修期(月)	保修服务类型
部件	电路板	12	客户送修
	电池	3	客户送修
	充电器、电源线、同步线等带电性能的部件	12	客户送修
其他	如闪光灯管、造型灯泡、外壳、保护罩、锁紧装置、包装等。	无	无保修
神牛产品售后服务电话 0755-29609320-8062			

## Foreword:

Thank you for purchasing this Godox Product!  
LED64 video light is excellent for macrophotography, product shooting, and video recording, etc. This lightweight and portable light provides high brightness and accurate color temperature. You can flexibly control the light brightness by using the dimmer and by interlocking multiple lights.

## ⚠ Warning:

- ⚠ Always keep this product dry. Do not use in rain or in damp conditions.
- ⚠ Do not disassemble. Should repairs become necessary, this product must be sent to an authorized maintenance center.
- ⚠ Keep out of reach of children.
- ⚠ As this product do not have waterproof function, please take measures of waterproof in rainy or damp environment.
- ⚠ Do not use or store the product if the ambient temperature reads over 50°C.
- ⚠ Do not use the flash unit in the presence of flammable gases, chemicals and other similar materials. In certain circumstance, these materials may be sensitive to the strong light emitting from this flash unit and fire or electromagnetic interference may result.

- ⚠ Observe precautions when handling batteries
  - Do not put batteries into a fire or apply direct heat to them.
  - Batteries are prone to leakage when fully discharged. To avoid damage to the product, be sure to remove batteries when the product is not used for a long time or when batteries run out of charge.
  - Should liquid from the batteries come into contact with skin or clothing, rinse immediately with fresh water.

## Parts:

- 01. 64 LED Beads
- 02. Power Switch
- 03. Brightness Controller
- 04. Battery Compartment Lock
- 05. Light Hotshoe Connection
- 06. Locking Ring
- 07. Camera Hotshoe Connection
- 08. DC Power Jack
- 09. 1/4" Bracket Mounting Hole



## Installation and Operation

### 1.Installing the Video Light

- Screw the Locking Ring (06) to the highest point and insert the Camera Hotshoe Connection horizontally into the hotshoe of a camera or a camcorder.
- Tighten the Locking Ring (06).

 


Note: If your camcorder has no hotshoe connection, you are advised to purchase a connecting bracket for camcorder. The video light has a 1/4" Bracket Mounting Hole as your camcorder does. Therefore, you can easily connect both the light and the camcorder to the bracket.

### 2.Using the Video Light



- Slide the Battery Compartment Lock (04) to the right and open the compartment.
- Install batteries (4\*AA) according to indications in the compartment and then lock it.
- Switch the power on, the video light giving out light.
- Turn the Brightness Controller (03) to adjust the brightness.

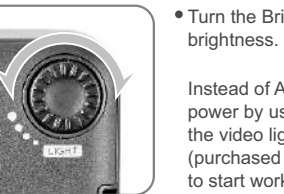

Instead of AA batteries, the light can use AC power by using the DC Power Jack. Connect the video light to AC power using a 5V charger (purchased separately). Then switch the light on to start working.

### 3.Interlocking Multiple Video Lights

Through the Light Hotshoe Connection (05) and Camera Hotshoe Connection (07), multiple video lights can be interlocked together to strengthen the lighting brightness and get a better control of the lighting effects.



## Technical Data:

Battery	Four AA batteries
DC Power Supply	5V
Power (Max.)	<4.5W
Color Temperature	5500~6500K
Brightness	>1000Lux (0.5m)
Brightness Control	Stepless
LED Beads Quantity	64
Operation Temperature	-10~40°C
Dimension	85mm*85mm*35mm
Net weight	130g

\* Product design and specifications are subject to change without notice.

## FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

深圳市神牛摄影器材有限公司  
地址: 深圳市宝安区福海街道塘尾社区福川工业区厂房2栋  
电话: 0755-29609320(8062) 传真: 0755-25723423 邮箱: godox@godox.com

GODOX Photo Equipment Co., Ltd.  
Add: Building 2, Yaochuan Industrial Zone, Tangwei Community, Fuhai Street, Bao'an District, Shenzhen, China Tel: +86-755-29609320(8062)  
Fax: +86-755-25723423 E-mail: godox@godox.com

godox.com



## Warranty

Dear customers, as this warranty card is an important certificate to apply for our maintenance service, please fill in the following form in coordination with the seller and safekeep it. Thank you!

Product Information	Model	Product Code Number
Customer Information	Name	Contact Number
	Address	
Seller Information	Name	
	Contact Number	
	Address	
Date of Sale		
Note:		

Note: This form shall be sealed by the seller.

### Applicable Products

The document applies to the products listed on the Product Maintenance Information (see below for further information). Other products or accessories (e.g. promotional items, giveaways and additional accessories attached, etc.) are not included in this warranty scope.

### Warranty Period

The warranty period of products and accessories is implemented according to the relevant Product Maintenance information. The warranty period is calculated from the day (purchase date) when the product is bought for the first time. And the purchase date is considered as the date registered on the warranty card when buying the product.

### How to Get the Maintenance Service

If maintenance service is needed, you can directly contact the product distributor or authorized service institutions. You can also contact the Godox after-sale service call and we will offer you service. When applying for maintenance service, you should provide valid warranty card. If you cannot provide valid warranty card, we may offer you maintenance service once confirmed that the product or accessory is involved in the maintenance scope, but that shall not be considered as our obligation.

### Inapplicable Cases

The guarantee and service offered by this document are not applicable in the following cases: (1). The product or accessory has expired its warranty period; (2). Breakage or damage caused by inappropriate usage, maintenance or preservation, such as improper packing, improper usage, improper plugging in/out external equipment, falling off or squeezing by external force, contacting or exposing to the improper temperature, solvent, acid, base, flooding and damp environments, etc.; (3). Breakage or damage caused by non-authorized institution or staff in the process of installation, maintenance, alternation, addition and detachment; (4). The original identifying information of product or accessory is modified, alternated, or removed; (5). No valid warranty card; (6). Breakage or damage caused by using illegally authorized, nonstandard or non-public released software; (7). Breakage or damage caused by force majeure or accident; (8). Breakage or damage that could not be attributed to the product itself. Once met these situations above, you should seek solutions from the related responsible parties and Godox assumes no responsibility. The damage caused by parts, accessories and software that beyond the warranty period or scope is not included in our maintenance scope. The normal discoloration, abrasion and consumption are not the breakage within the maintenance scope.

### Maintenance and Service Support Information

The warranty period and service types of products are implemented according to the following Product Maintenance Information:

Product Type	Name	Maintenance Period (month)	Warranty Service Type
Parts	Circuit Board	12	Customer sends the product to designated site
	Battery	3	Customer sends the product to designated site
	Electrical parts e.g. battery charger, power cord, sync cable, etc.	12	Customer sends the product to designated site
Other Items	Flash tube, modeling lamp, lamp body, lamp cover, locking device, package, etc.	No	Without warranty

Godox After-sale Service Call 0755-29609320-8062